

Installation Instructions for Windows

SIGMA Photo Pro Version 2.1 and Sigma SD9/SD10 Camera Drivers

System Recommended Requirements

- Pentium II 233MHz
- Windows 98 Second Edition, Windows 2000, Windows ME, Window XP
- 256MB RAM (minimum)
- 40MB of available hard disk space
- 16-bit display card (24-bit recommended)
- 800x600 monitor resolution (1024x768 recommended)
- USB or IEEE 1394 (FireWire) connection
- CD-ROM drive

To Install SIGMA Photo Pro

1. Make sure all applications are closed on your computer before downloading the software installer.
2. Download PhotoPro Setup.exe on your local computer from the Sigma Web site.
3. To start the installation, make sure that the camera is not connected to the computer. Make sure the camera is turned off.
4. Double-click on the "Setup.exe" icon.
5. The first page of the installer will be displayed. This page shows the languages available for Photo Pro. Choose your language and press the Next button.
6. After selecting the language, the second page is displayed. Press the Next button.
7. The End User License Agreement page will be displayed. Select the 'Yes' button to accept the terms and conditions and the installer will proceed to the next window. Otherwise press Cancel to Exit and terminate the installation process.
8. In the destination folder selection page, press the Next button to select the default path for installation or browse for a path of your own using the Choose option. After you are done, press the Next button to continue or press Cancel to exit the installation process.
9. An installation progress window will be displayed. You may abort the installation process at any time by pressing the Cancel button.
10. SD9 Camera Driver and Documentation installation procedure window will be displayed next. Press the Next button.
11. Press Restart to reboot your computer or press Exit to continue working on the computer.

NOTE: You must restart the computer before continuing with the install process. If you want to perform other operations before shutting down or restarting, press Exit and return to Windows. Then make sure to restart your computer before running SIGMA Photo Pro.

To Uninstall SIGMA Photo Pro

1. Choose the Uninstall option from the SIGMA section of the Start Menu, or through the Add/Remove Programs option in the Control Panel.

To Install SD9/SD10 Camera Drivers

Windows 2000

1. Make sure the camera is turned off.

2. Plug in the IEEE/1394 cable into the FireWire port on the back of your computer and into the FireWire port on the side of the camera.

3. After these connections have been made, turn on the camera and wait for the Window's Hardware Wizard to appear.

This may take up to 30 seconds.

4. Once the Hardware Wizard appears, click Next to continue.

5. In the second screen, Select the 'Search for a suitable driver...' option and Press Next.

6. Select the 'Specify a location' option and press Next.

7. In the 'Copy manufacturer's files from:' field, browse to the location you installed SIGMA Photo Pro. In a typical installation, that path looks like:

C:\Program Files\SIGMA\Photo Pro\Drivers

Press OK to continue.

8. Once the installer detects the drivers, for SD9 cameras it will display 'Sigma SD9 camera'. For SD10 cameras it will display "Sigma SD10 Camera". Press Next to continue.

9. In the 'Copy files from:' field, browse to the location you installed SIGMA Photo Pro. In a typical installation, that path looks like:

C:\Program Files\SIGMA\Photo Pro\Drivers

Press OK to continue.

10. Press Finish to complete the driver installation.

11. The Hardware Wizard will close. Photo Pro and your camera is ready to use now.

Windows XP

1. Make sure the camera is turned off.

2. Plug in the IEEE/1394 cable into the FireWire port on the back of your computer and into the FireWire port on the side of the camera.

3. After these connections have been made, turn on the camera and wait for the Windows Hardware Wizard to appear.

This may take up to 30 seconds.

4. Once the Hardware Wizard appears, Make sure that "Install the software automatically (recommended)" is selected.

Click Next to continue.

5. In the 'Copy files from' field, browse to the location you installed SIGMA Photo Pro. In a typical installation, that path looks like:

C:\Program Files\SIGMA\Photo Pro\Drivers

Press OK to continue.

6. Once the installer detects the drivers, for SD9 cameras it will display 'Sigma SD9 camera'. For SD10 cameras it will display "Sigma SD10 Camera". Press Finish to complete the driver installation.

7. The Hardware Wizard will close. Photo Pro and your camera is ready to use now.

Windows 98SE & ME

1. Make sure the camera is turned off.

2. Plug in the IEEE/1394 cable into the FireWire port on the back of your computer and into the FireWire port on the

side of the camera.

3. After these connections have been made, turn on the camera and wait for the Windows Hardware Wizard to appear.

This may take up to 30 seconds.

4. Once the Hardware Wizard appears, in the 'Copy files from' field, browse to the location you installed SIGMA Photo

Pro. In a typical installation, that path looks like:

C:\Program Files\SIGMA\Photo Pro\Drivers

Press OK to continue.

5. Drivers will be installed on your system and the Hardware Wizard will close automatically.

Troubleshooting:

1. If the Hardware Wizard fails to appear, restart the computer, uninstall Photo Pro software and then reinstall it again.

2. Occasionally the Firewire/1394 adapter in the computer can enter a state which requires that the computer be turned off in order for it to be reset, so you should shutdown the machine and then restart Windows.