

# INSTALLATION INSTRUCTION

## SD9 Firmware (v 2.0.4.1642) Installation and Updating Instructions **via CF-card copy**

### SD9 Firmware Update v2.0 (build 1642) -- Installation via CF-card Copy

It is possible to upgrade your SD9 firmware via CF card. If you do not have a Firewire (1394) interface, and are having trouble updating your SD9 firmware via a USB connection, then we recommend you to update your SD9 camera by this alternative update method. Please follow these steps.

1. Please read the license agreement, and if you accept it, please click the button below to download the firmware file to anywhere in your computer's HDD.
2. Using any kind of CF-card reader/writer attached to your computer, drag or copy the downloaded file "UpdateSD9Prod.upd" to an empty CF card, at top level ("root" level -- NOT inside an "IMAGES" folder).
3. Put the CF card into your SD9 camera (NOT connected to a computer), and turn the SD9 on.
4. Wait about 40 seconds for the red LED to turn off.
5. To verify your camera's firmware version after update, please follow this sequence of steps:
  - a. Choose the 'Menu' button on the back of the camera (to the left of the LCD screen)
  - b. Select the top menu item "Camera Info...".
  - c. Depress the right arrow on the 4-Way Controller.
  - d. Depress the bottom arrow on the 4-Way Controller and verify that it says "Digital: 2.0.4.1642 Release" instead of your old firmware number.